



**INSTALLATION
INSTRUCTIONS**



Part # 11169513



**Neutral Safety Switch Linkage Relocation Kit
1967-1981 F-Body w/Ridetech Subframe**




www.ridetech.com
812.482.2932





**Please Read And Understand All Instructions
And Warnings Prior To The Installation Of
This Product.**

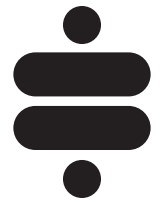

THANK YOU

Congratulations on your new Ridetech product! It's an honor that you've selected the Ridetech brand to upgrade your ride. Our products are developed around quality and performance without compromise. We're confident you'll have many years (and miles) of pure driving enjoyment.
Thank you for choosing Ridetech!

Road Map

Installation Instructions

3

COMPONENTS		
Part #	Description	Qty
70017421	Template (1967-69 Only)	1
70017422	Spacer	3
99311035	5/16" x 1 1/2" Screw	3

This kit is designed to relocate the frame-mounted neutral safety switch linkage onto the Ridetech subframe for vehicles that meet the following criteria:

1969 Camaro/Firebird with the factory 302, 350, or 396 engine, with the 3 or 4-speed manual transmission.

1970-1981 Camaro/Firebird with the factory transmission.

INSTALLATION INSTRUCTIONS

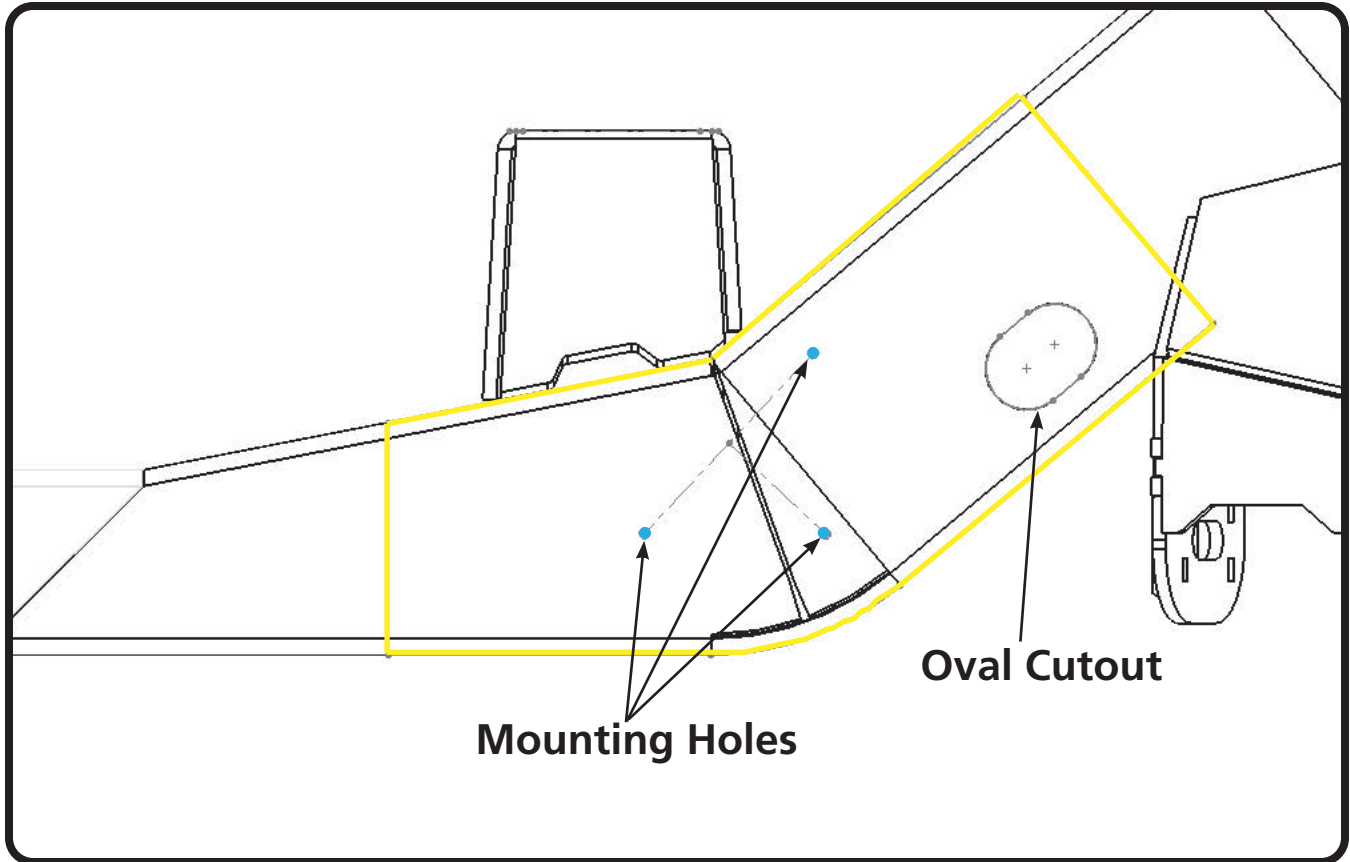


Figure 1

NOTE: Steps 1-3 only apply to the 1967-69 Ridetech subframe. The 1970-81 subframe already has the mounting holes.

1. Position the 70017421 template on the inside of the driver side frame rail of the new subframe. Align the oval cutout in the template with the oval cutout in the frame rail. The template is outlined in yellow in Figure 1.
2. Use the template to mark the location of each of the 3 mounting holes on the new subframe (shown in blue in Figure 1).
3. Drill a 1/4" pilot hole at each hole location.
4. Use the included 5/16" self-tapping screws to mount the linkage to the new subframe. Install a 70017422 spacer between the linkage and the frame on each of the screws.