



**INSTALLATION
INSTRUCTIONS**




Part # 11179511



Clutch Z-Bar Bracket

1970-1981 F-Body w/Ridetech Subframe



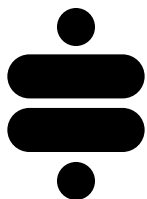

**Please Read And Understand All Instructions
And Warnings Prior To The Installation Of
This Product.**



THANK YOU

Congratulations on your new Ridetech product! It's an honor that you've selected the Ridetech brand to upgrade your ride. Our products are developed around quality and performance without compromise. We're confident you'll have many years (and miles) of pure driving enjoyment.
Thank you for choosing Ridetech!

Road Map

Installation Instructions

3

COMPONENTS		
Part #	Description	Qty
90003921	Clutch Z-Bar Bracket	1
99311036	5/16" x 1" Screw	3

**This kit is designed to retain your mechanical clutch linkage on the
Ridetech subframe.**

Bracket Installation

NOTE: Make any final adjustments to the position of your engine and transmission prior to installing the clutch bracket.

1. Attach the bracket to the clutch z-bar shaft using the original hardware. Attaching the bracket to the shaft first will take some of the guesswork out of determining the mounting location on the frame.

NOTE: When properly installed, the bottom of the bracket should be parallel with the bottom of the frame rail.

2. Use the bracket as a template to mark the locations for the 3 mounting holes.

3. Drill a 9/32" hole at each of the three marked locations.

4. Mount the bracket to the frame using the three 5/16" self-tapping screws included with this kit (Figure 2).

5. Finish connecting the clutch linkage components and double check all hardware.



Figure 1



Figure 2