




Part # 11337299 - 1963-1972 C10 Wood Bed Spacer Kit




Recommended Tools

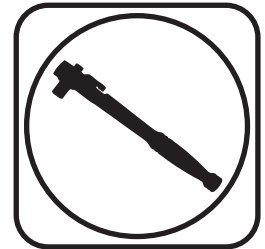

63-72 C-10 Wood Bed Spacer Kit Installation Instructions

Major ComponentsIn the box

Part #	Description	QTY
90001351	Shock Crossmember Spacers	6
99431023	7/16_14 x 1 3/4" Hex Bolts	6

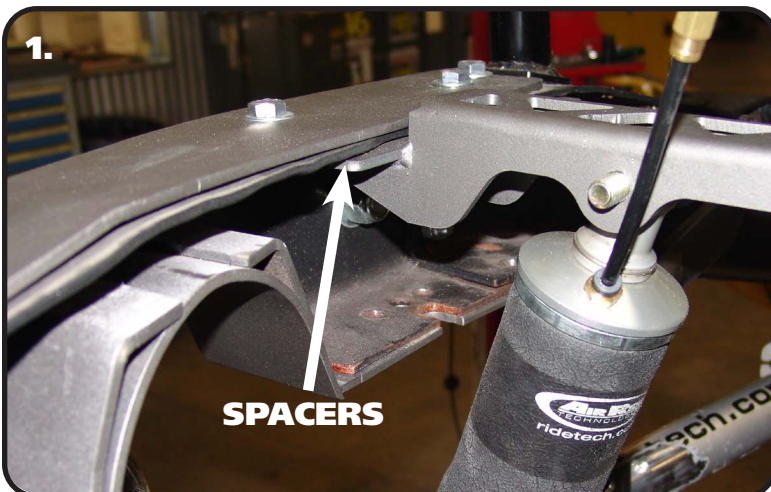

THIS KIT WILL BE INSTALLED IN CONJUNCTION WITH THE REAR TRAILING ARM KIT. WOOD BED FLOORS HANG DOWN LOWER THAN THE METAL BED FLOORS REQUIRING THE SHOCK CROSSMEMBER TO BE SPACED DOWN TO CLEAR THE FLOOR

1. If your truck has a wood bed floor, these spacers will need to be installed between the upper shock crossmember and the frame. The bolts supplied with the spacers will be used instead of the bolts supplied in the trailing arm kit. It normally takes 3 spacers per side.