


Installation Instructions



Part # 11359400 - 1971-1987 C10 Tie Rod Adjuster

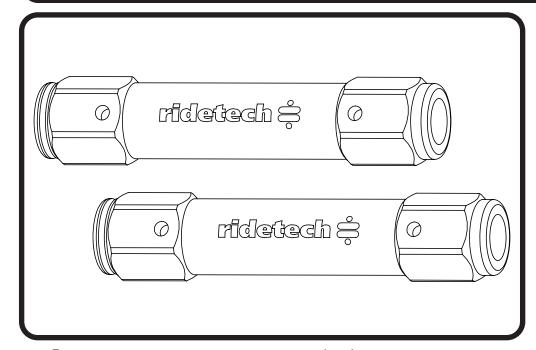

Recommended Tools



Major ComponentsIn the box

QTY	Part Number	Description
2	90000138	Tie Rod Adjuster
2	99800000	11/16"-18 Right Hand Jam Nut
2	99800001	11/16"-18 Left Hand Jam Nut

NOTES:

This Tie Rod Adjuster is designed to take place of the OEM steel sleeve.

One end of the adjuster has a **groove** cut in it, this is the **LEFT HAND** threaded side.

When installing the Tie Rod Adjuster, use antisieze compound on the threads.

FOR YOUR SAFETY, THE TIE RODS NEED A MINIMUM 1 1/32" OF THREAD ENGAGEMENT INTO THE TIE ROD ADJUSTER. USE THE SIGHT HOLE IN THE SIDE OF THE TIE ROD ADJUSTER TO ENSURE PROPER THREAD ENGAGEMENT.

