



**INSTALLATION
INSTRUCTIONS**



Part # 9000965X




Ford 9" 3rd Member

Gear Ratios: 3.50, 3.70, 3.89, 4.11



www.ridetech.com
812.482.2932



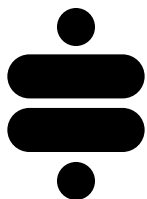

**Please Read And Understand All Instructions
And Warnings Prior To The Installation Of
This Product.**



THANK YOU

Congratulations on your new Ridetech product! It's an honor that you've selected the Ridetech brand to upgrade your ride. Our products are developed around quality and performance without compromise. We're confident you'll have many years (and miles) of pure driving enjoyment.
Thank you for choosing Ridetech!

COMPONENTS		
Part #	Description	Qty
90009654	Lube Locker Gasket	1
90009658	Pinion Seal (Pre-Installed)	1
90001338	1350 U-Bolts (1 Pair w/Nuts and Washers)	1

Install the 3rd member prior to installing the axles.

Torque the stud nuts to 35 ft-lbs

(nuts are included with the 1117968X kit)

IMPORTANT

Be sure to use a criss-cross pattern when tightening and torquing the 3rd member studs.

⚠ USE ONLY 80W-90 NON-SYNTHETIC GEAR OIL ⚠

Initial Break In

(5 heat cycles)

- 1) Fill with Gear Oil
- 2) Drive gently for 15 min (no aggressive driving)
- 3) Let rest for 30-45 min
- 4) Repeat steps (2) & (3) 4 more times